



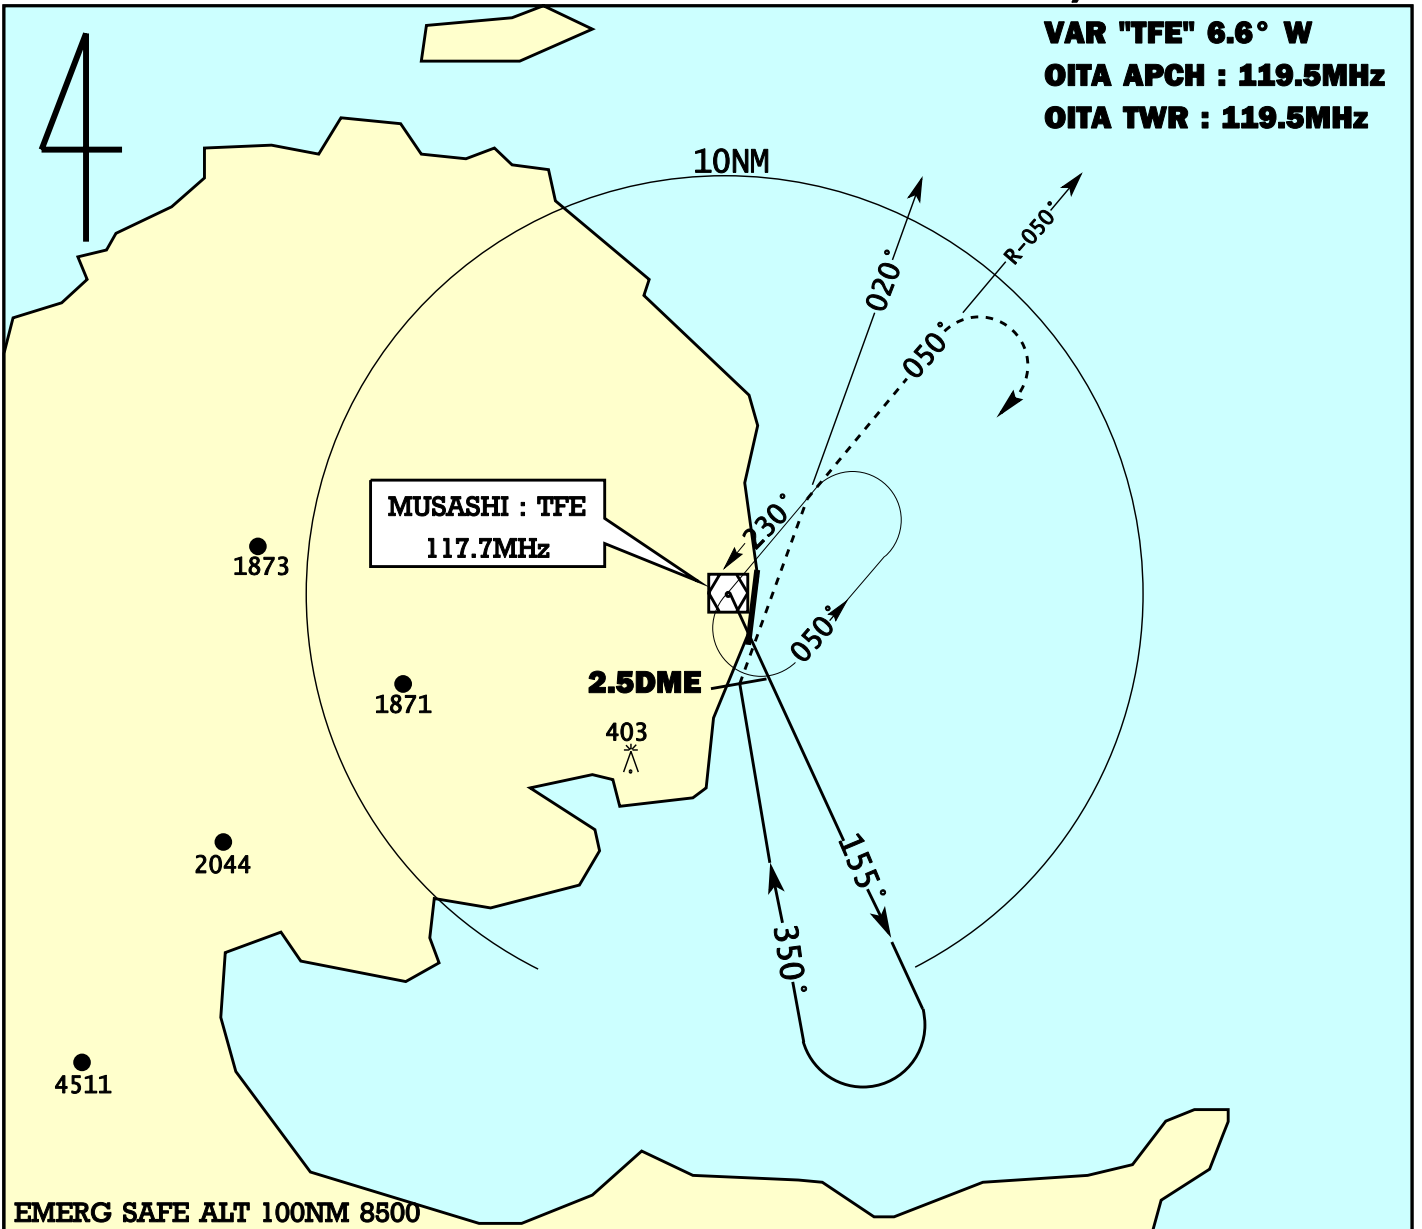

FIELD ELEV 17

MISSED APPROACH

2.5DME prior to "TFE" turn right on heading 020° to intercept and proceed via "TFE" R-050 to 3,500, then turn right within "TFE" 10DME proceed to "TFE" and hold. Contact OITA APCH.

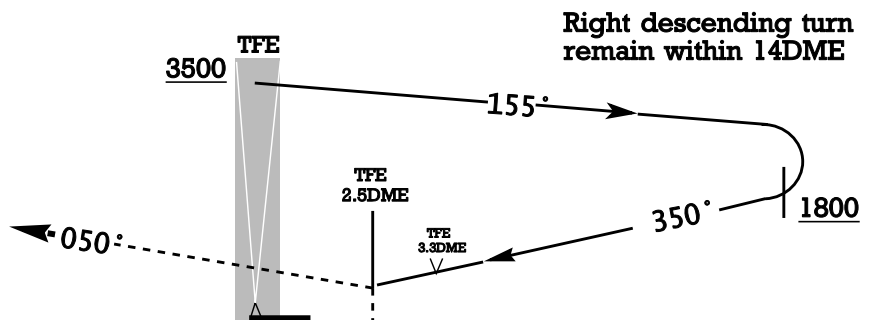

(LANDING)		A	B	C	D
St-in	PALS		600-1500		600-1900
01	PALS OUT		600-2400		600-3200
Circling*		600-1600	700-2400	700-3200	
ALTN	Precision apch	600-3200			
	VOR/DME abvl	800-3200			
	Other	1200-3200			

*Circling to E side only

(TKOF)		HIRL & RCL	HIRL or RCL	HIRL & RCL out
ALT	01	0/500-400	0/600-600	0/800-800
AP	19	0-400	0-600	0-800
field				
Other		Avbl Landing Minima		

